MOUNTING THE STEREO (cont'd)

DOUBLE DIN MOUNT

1. Attach factory A/C controls to 6944 panel using the (5) factory Phillips head screws removed during disassembly (see right).
2. Attach 6945 and 6946 brackets to aftermarket double din stereo using screws supplied with aftermarket stereo.
3. Attach A/C module to 6945 and 6946 brackets using (2) Phillips head screws from factory brackets removed during disassembly.
4. Reconnect and secure stereo, A/C module and brackets into dash using Phillips head screws removed during disassembly.
5. Reconnect A/C controls and place 6944 panel, and factory A/C control assembly into dash and secure using (4) during disassembly.

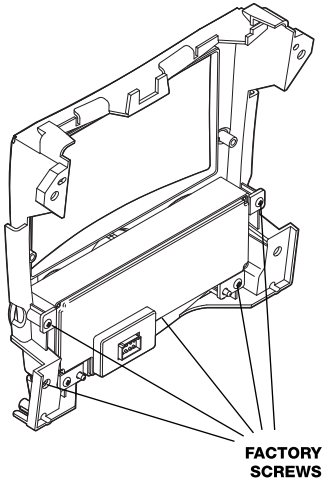

NOTE: REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORT OF THE STEREO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.

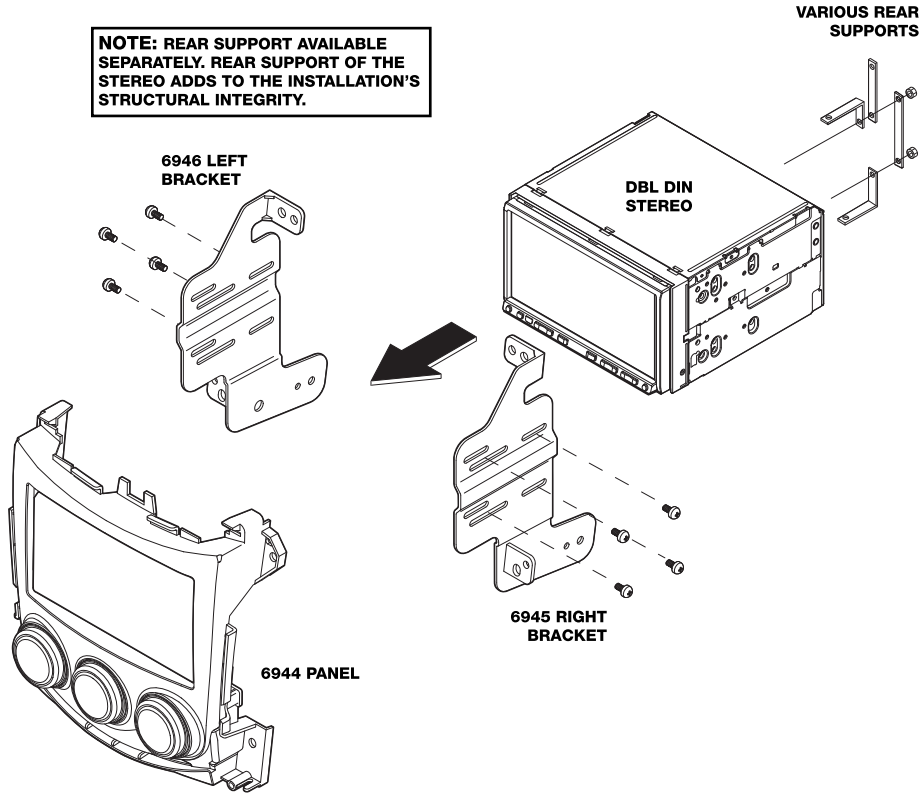

SCOSCHE

NN1665B

IN-DASH STEREO INSTALLATION KIT FOR 2009-UP NISSAN 370Z (NON-NAVIGATION)

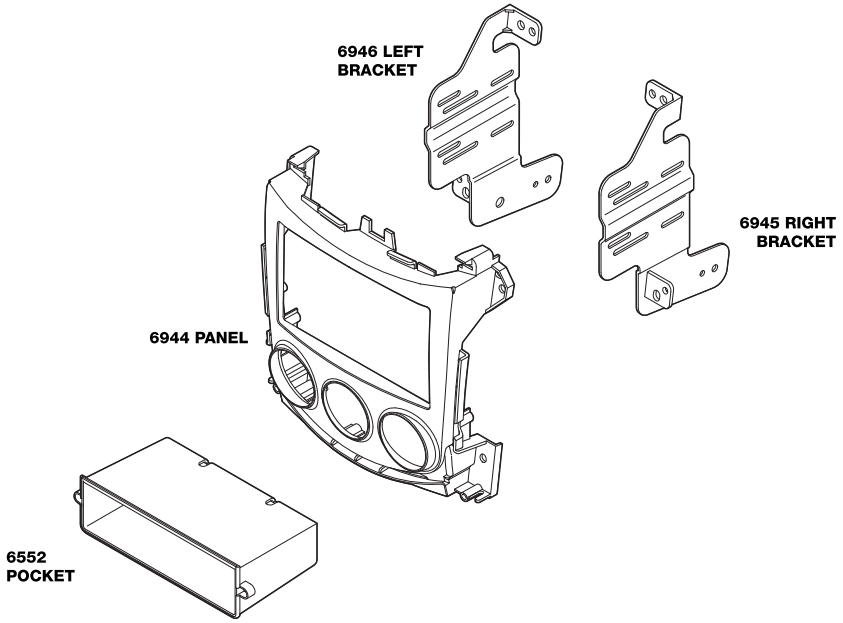

INTRODUCTION / PRELIMINARY

This premium installation kit is for 2009-Up Nissan 370Z (non-navigation) vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (NN1665B) in 2009-Up 370Z vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2010 SCOSCHE INDUSTRIES, INC.

SI 1/10 - NN1665B (3000003)

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS	
PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS. **NN04B** 2007-Up Nissan Connector	**NN04B** 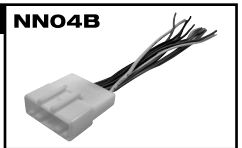
NAA2B 2007-Up Nissan Antenna Adapter	**NAA2B** 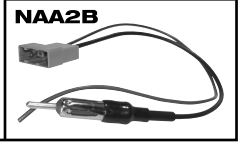

FACTORY STEREO REMOVAL

2009-UP NISSAN 370Z (non-navigation)

High-End Radio:

1. With panel removal tool, unclip panel surrounding shifter and move back.
2. Extract (2) Phillips head screws securing side panel between shifter and A/C controls and with panel removal tool, unclip and remove. (Do this for both left and right side panels.)
3. Extract (2) Phillips head screws to the sides of the A/C controls securing radio panel and with panel removal tool, unclip, unplug and remove.
4. Extract (6) Phillips head screws securing radio, unplug and remove.
5. Extract (5) Phillips Head screws securing A/C controls to bezel. Retain screws and A/C controls for re-use during kit assembly.
6. Remove (2) Phillips head screws from factory brackets securing A/C module. (Retain screws and A/C modules for re-use during kit assembly)

Standard Radio:

1. With Panel removal tool, unclip panel surrounding shifter and move back.
2. Extract (2) Phillips head screws securing side panel between shifter and A/C controls and with panel removal tool, unclip and remove. (Do this for both left and right side panels.)
3. Extract (2) Phillips head screws to the sides of the A/C controls securing radio panel and with panel removal tool, unclip, unplug and remove.
4. Extract (4) Phillips head screws securing radio bezel and A/C controls, unplug and remove.
5. Extract (4) Phillips head screws securing radio, unplug and remove.
6. Extract (5) Phillips head screws securing the A/C Controls to bezel. Retain screws and A/C controls for re-use during kit assembly.
7. Remove (2) Phillips head screws from factory brackets securing A/C module. Retain screws and A/C modules for re-use during kit assembly.

MOUNTING THE STEREO

SINGLE DIN MOUNT

1. Attach Factory A/C controls to 6944 Panel using the (5) factory Phillips head screws removed during disassembly (see right).
2. Attach 6552 pocket to 6944 panel using screws supplied with kit (see below).
3. Attach 6945 and 6946 brackets to aftermarket stereo using screws supplied with aftermarket stereo.
4. Attach AC module to 6945 and 6946 brackets using (2) Phillips head screws from factory brackets removed during disassembly.
5. Reconnect and secure stereo, A/C module and brackets into dash using Phillips head screws removed during disassembly.
6. Reconnect A/C controls and place 6944 panel, 6552 pocket and factory A/C control assembly into dash and secure using (4) during disassembly.